

v1.0

ePIC Control Board V4.3 Software Update Guide

Version 1.0

Cristian Filipescu (cfilipescu@epicblockchain.io)

Luca Vezoc (lvezoc@epicblockchain.io)

This document is proprietary and confidential. No part of this document may be disclosed in any manner to a third party without the prior written consent of ePIC Blockchain Technologies Inc.

Updating a miner through ePIC Dashboard for future software releases

Update using epic-dashboard:

1. If you can't find your miner, press Quick Scan to scan your local network, or Advanced Scan to scan a wide range of IP addresses
2. Click on the Table menu item
3. Check the checkboxes corresponding to the miners you want to update
4. Click on the System tab
5. Under Update Firmware click on Browse
6. Find the [.swu file](#) on your system containing the software update
7. Check the maintain config over update checkbox if you wish to do so
8. Enter your password and click Apply
9. Your miner will begin the firmware update
10. After the process is complete, the miner will begin mining automatically